

Document Title: Service points	Function Group: 173	Information Type: Service Information	Date:
Profile: ECR28 Volvo			

Service points

Showing Selected Profile

Valid for serial numbers			
Model	Production site	Serial number start	Serial number stop
ECR28 Volvo			

The service points are accessible under the engine hood and under the rear covers of the machine.

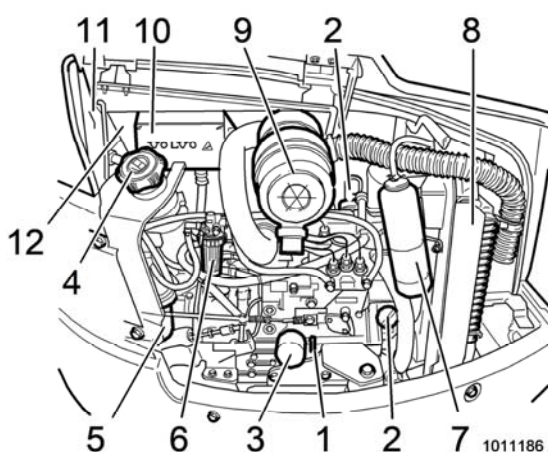


Figure 1

Service points under the engine hood (ECR28 shown)

1. Engine oil level
2. Engine oil filler neck
3. Engine oil filter
4. Fuel filler neck
5. Fuel prefilter/water separator
6. Fuel filter
7. Coolant expansion tank
8. Radiator
9. Air filter
10. Relays and fuses
11. Hand lamp receptacle
12. Hydraulic oil level

Top and bottom rear covers can be removed to access further service points.

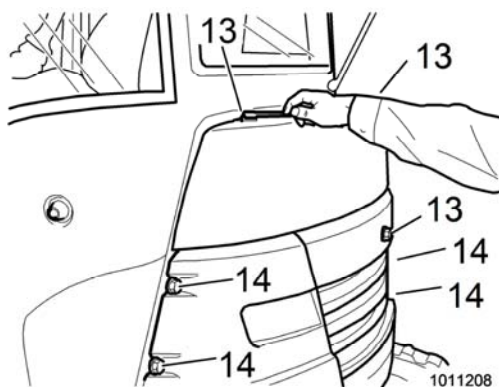


Figure 2

Rear covers

13 Top cover

14 Hexagon screws (bottom cover)

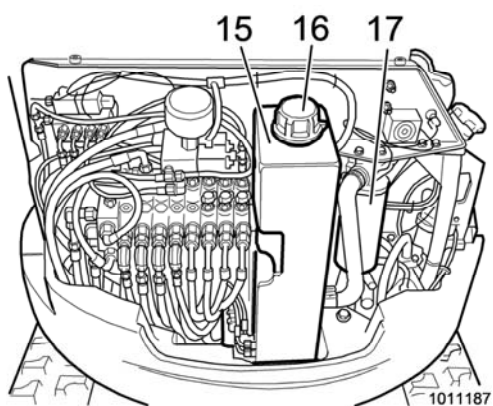


Figure 3

Service points under the rear covers

15 Hydraulic oil tank

16 Hydraulic oil filler neck

17 Hydraulic oil filter