

Document Title: Travel lever throttle cable, adjusting	Function Group: 442	Information Type	Date:
Profile: ECR28 Volvo			

Travel lever throttle cable, adjusting

Showing Selected Profile

Valid for serial numbers			
Model	Production site	Serial number start	Serial number stop
ECR28 Volvo			

Op nbr 442-162

1. Place the machine in Service Position 1. Refer to [Service position](#).
2. Remove the floor mat and disassemble the floor plate.
3. Disconnect the clevis (5) from the regarding travel control lever (1).

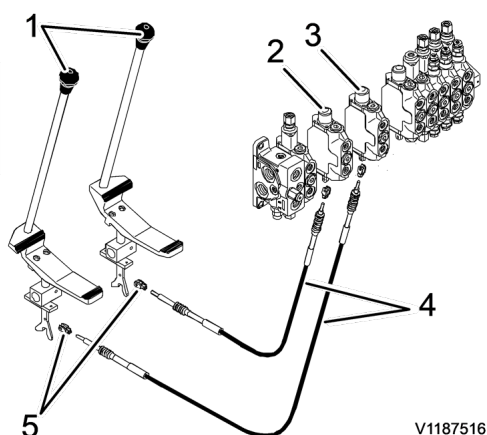


Figure 1

Travel lever throttle cable, adjusting

1. Travel control lever
 2. Control valve, right travel motor
 3. Control valve, left travel motor
 4. Bowden cable
 5. Clevis
4. Adjust the clevis on the Bowden cable (4).
NOTE!
Make sure that both travel control levers are in neutral position.
 5. Connect the clevis to the regarding travel control lever.
 6. Check that the travel control levers do not make contact to the switches (3, 4) of the back-up warning unit.
NOTE!
Make sure that both travel control levers are in neutral position.

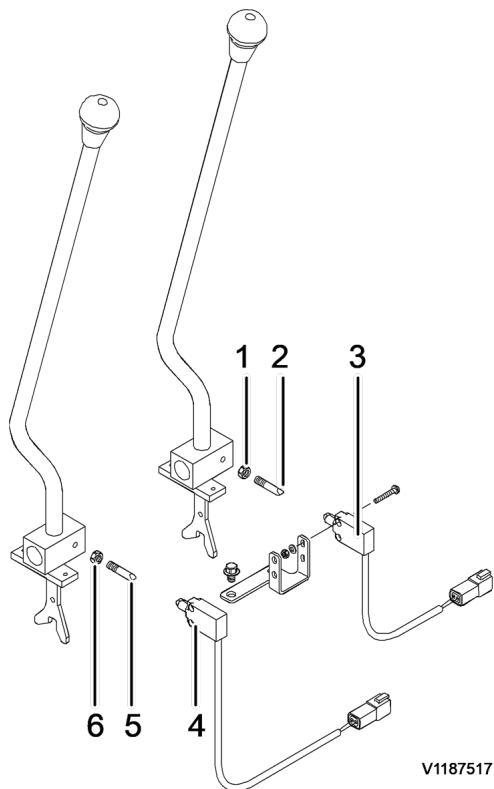


Figure 2

Back-up warning unit, adjusting

1. Hexagon nuts
 2. Rod
 3. Switch, right back-up warning
 4. Switch, left back-up warning
 5. Rod
 6. Hexagon nuts
7. Adjust the hexagon nuts (1,6) and the rods (2,5) if needed.
 8. Start the engine.
 9. Bring the travel control levers in neutral position.
 10. Check that the machine is not moving and the back-up warning is not activated.
NOTE!
 Adjust if needed.
 11. Stop the engine.
 12. Reassemble the floor plate and install the floor mat.